

Renault Clio

3-5 Door Hatch / 4 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

	psi (bar)
175/65 R14 Front	34 (2.3)
175/65 R14 Rear	29 (2.0)
175/65 R14 Front (full load)	35 (2.4)
175/65 R14 Rear (full load)	30 (2.1)
185/55 R16 Front	32 (2.2)
185/55 R16 Rear	29 (2.0)
185/55 R16 Front (full load)	34 (2.3)
185/55 R16 Rear (full load)	30 (2.1)

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central locking. Depress the door locking knobs to lock the doors from the inside.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
Opening the boot/tailgate?	Centrally locked. Use the key or remote control to unlock / open.
Adjusting the door mirrors?	Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear.
Operating the sunroof?	If fitted: Manual tilt/slide operated by roof mounted control lever. Electric tilt / slide. To open: press the roof mounted switch backward. To close: press it forward. To tilt: first open it, then press the switch forward. To lower: press the switch backwards.
Using the child door locks?	Located on the edge of the rear doors, slide the lever to activate it. Check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Located under flap on rear offside. Lift the edge of the flap to open it, unlock using the ignition key and twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located on left side panel of front passenger footwell. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use 1 or 2 to select low gears only (this option offers best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).


Fuel Tank Capacity:
50.0 litres / 11.0 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

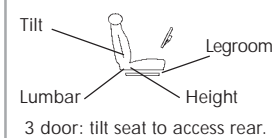

DESIGN AND PRODUCTION BY BETS MULTIMEDIA COMMUNICATIONS T. 0118 964 8526

VCS-REN-01 / 13-10-2003

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide.** If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.

Renault Megane Scenic


Small People Carrier / 5 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

	psi (bar)
195/65 R15 Front	32 (2.2)
195/65 R15 Rear	29 (2.0)
195/65 R15 Front (full load)	34 (2.3)
195/65 R15 Rear (full load)	34 (2.3)
205/55 R16 Front	32 (2.2)
205/55 R16 Rear	29 (2.0)
205/55 R16 Front (full load)	34 (2.3)
205/55 R16 Rear (full load)	34 (2.3)

Some vehicles may be fitted with a tyre pressure indicator on the dashboard readout which monitors tyre pressure and reports on status.

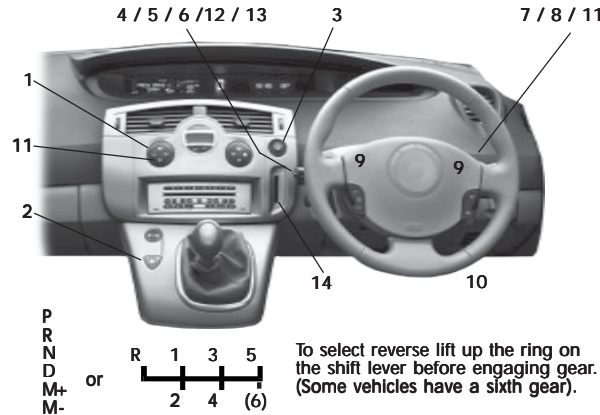

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Entry Key Card Slot

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Keyless card entry system / remote control operated central deadlocking. Use 'plip' on card to lock/unlock the vehicle. To lock all doors from the inside press the central locking button on the centre console adjacent to the gear lever. Or depress the door locking knobs.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Auto door locking above 6 mph.
Opening the boot/tailgate?	Centrally locked. Use 'plip' on key card to lock/unlock it. Some models are fitted with a separately opening tailgate window.
Adjusting the door mirrors?	Electric internal adjustment operated via a control pad on the righthand side of the dashboard.
Opening the windows?	All electric or electric front operated via control buttons on the driver's door. Manually operated rear.
Operating the sunroof?	If fitted. Twin electric tilt / slide. Operated by roof mounted switchgear.
Using the child door locks?	Depress the central locking button located on the centre console adjacent to the gear shift lever. Check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place key card into card slot in centre console. Press the engine start/stop button above this slot to start/stop engine. Select desired gear. Release console mounted handbrake lever (<i>the parking brake lever is located on the lower right of the steering wheel - it auto engages when engine is turned off, and is deactivated when the accelerator is pressed - can also be manually applied</i>) and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Lift the flap to open it. This vehicle is fitted with a sealed valve which is opened when the fuel nozzle is introduced.
Releasing the bonnet?	Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
How to fold the rear seats?	The sliding rear seat is divided into sections which can be folded / removed separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. To remove the seats unlock the floor locks and slide / lift the seat. Check all seats are securely locked before use.
How to change a tyre?	Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).


Fuel Tank Capacity:
60.0 litres / 13.0 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

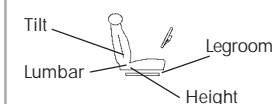

DESIGN AND PRODUCTION BY BETS MULTIMEDIA COMMUNICATIONS T. 0118 966 8526

VCS-REN-02 / 13-10-2003

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide.** If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.

Renault Laguna

5 Door Hatch / 5 Door Estate / 5 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

	psi (bar)
195/65 R15 Front	30 (2.1)
195/65 R15 Rear	30 (2.1)
195/65 R15 Front (full load)	33 (2.3)
195/65 R15 Rear (full load)	33 (2.3)
205/55 R16 Front	34 (2.3)
205/55 R16 Rear	30 (2.1)
205/55 R16 Front (full load)	35 (2.4)
205/55 R16 Rear (full load)	32 (2.2)

Onboard electronic tyre pressure monitor display on upper centre console.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Entry Key Card Slot

PRND or R 1 3 5 2 4 (6) M+

To select reverse lift up the ring on the shift lever before engaging gear. (Some vehicles have a sixth gear).

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Keyless card entry system / remote control operated central deadlocking. Use 'plip' on card to lock/unlock the vehicle.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key card from slot in centre console. VIN window etching.
Opening the boot/tailgate?	Centrally locked. Use keyless entry card. Use 'plip' on card to lock/unlock. Use internal remote release inside vehicle. (Estate models features an opening tailgate window).
Adjusting the door mirrors?	Electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric.
Operating the sunroof?	If fitted: Electric - operated by a roof mounted rotary switch. To open: twist the switch clockwise. To close: twist the switch anticlockwise.
Using the child door locks?	Press the switch on the driver's door. Once activated check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place key card into card slot in centre console. Depress the clutch (if manual) and press the engine start/stop button on right of centre console to start/stop engine. Select desired gear. Release handbrake and brake pedal and press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Pull the remote release. Lift the flap to open it and twist off the cap anticlockwise.
Releasing the bonnet?	Press the electronic release button located on the centre console. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
70.0 litres / 15.4 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

DESIGN AND PRODUCTION BY BETS MULTIMEDIA COMMUNICATIONS T. 0118 996 8526

VCS-REN-03 / 13-10-2003

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK** accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of Europcar staff for assistance.

Please **DO NOT** remove this instruction card from the vehicle.

Renault Megane

3-5 Door Hatch / 5 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

	psi (bar)
195/65 R15 Front	32 (2.2)
195/65 R15 Rear	29 (2.0)
195/65 R15 Front (full load)	33 (2.3)
195/65 R15 Rear (full load)	30 (2.1)
205/55 R16 Front	32 (2.2)
205/55 R16 Rear	29 (2.0)
205/55 R16 Front (full load)	35 (2.4)
205/55 R16 Rear (full load)	32 (2.2)

Onboard electronic tyre pressure monitor display on upper centre console.

Emergency spare wheel 35 psi (2.4 bar)

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Entry Key Card Slot

4 / 5 / 6 / 9 / 12 / 13

7 / 8

P
R
N
D
M+
M-

or

R 1 3 5
2 4 (6)

To select reverse lift up the ring on the shift lever before engaging gear. (Some vehicles have a sixth gear).

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Keyless card entry system / remote control operated central deadlocking. Use 'plip' on card to lock/unlock the vehicle. To lock all doors from the inside press the central locking button on the centre console.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key card from slot in centre console. VIN window etching.
Opening the boot/tailgate?	Centrally locked. Use keyless entry card. Use 'plip' on card to lock/unlock. Use internal remote release inside vehicle.
Adjusting the door mirrors?	Electric internal adjustment operated via a control knob on the driver's door. Or manual adjustment via control levers on each door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric.
Operating the sunroof?	If fitted: Electric - operated by a roof mounted rotary switch. To open: twist the switch clockwise. To close: twist the switch anticlockwise.
Using the child door locks?	Press the switch on the driver's door. Once activated check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place key card into card slot in centre console. Depress the clutch (if manual) and press the engine start/stop button on right of centre console to start/stop engine. Select desired gear. Release handbrake / brake pedal and press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Lift the flap to open it to reveal fuel filler slot.
Releasing the bonnet?	Pull the release lever located below glovebox on upper left of front passenger footwell. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift both recess covers inside the boot to access the emergency spare tyre. The tools and jack are stored adjacent to the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).


Fuel Tank Capacity:
70.0 litres / 15.4 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

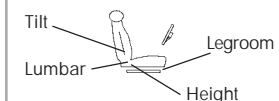

DESIGN AND PRODUCTION BY BETS MULTIMEDIA COMMUNICATIONS T. 0118 996 8526

VCS-REN-04 / 13-10-2003

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide.** If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.

Renault Espace

People Carrier / 6-7 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...


The legal minimum tread depth is 1.6 mm

	psi (bar)
225/55 R17 Front	35 (2.4)
225/55 R17 Rear	34 (2.3)
225/55 R17 Front (full load)	38 (2.6)
225/55 R17 Rear (full load)	34 (2.3)
225/60 R17 Front	35 (2.4)
225/60 R17 Rear	34 (2.3)
225/60 R17 Front (full load)	38 (2.6)
225/60 R17 Rear (full load)	34 (2.3)

On vehicles fitted with a **spacesaver** spare tyre be advised that these tyres **cannot be used for long distance travel** and your driving speed is limited.

Some vehicles are fitted with an onboard tyre pressure monitor.

(2 - is roof mounted) 4 / 5 / 6 / 12 / 13 7 / 8

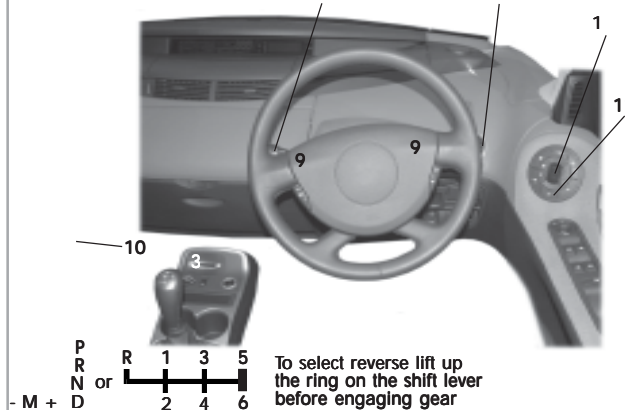

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central deadlocking.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. VIN window etching. Some models are fitted with an anti-theft alarm.
Opening the boot/tailgate?	Centrally locked. Use the key or remote control to unlock / open.
Adjusting the door mirrors?	Electric internal adjustment operated via a control pad on the driver's door.
Opening the windows?	Electric front and rear operated via control buttons on the driver's door.
Operating the sunroof?	If fitted: electric tilt / slide operated by roof mounted rotary switchgear.
Using the child door locks?	Press the child lock switch located on the driver's door to activate it. Check from inside that the doors are secure.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place key card into card slot in centre console. Press the engine start/stop button on left of centre console to start/stop engine. Select desired gear. Release console mounted handbrake lever (the handbrake is located on the lower right of the steering wheel) and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Lift the edge of the flap to open it and twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located on the left side panel in the front passenger foot well. Unhook catch under bonnet.
How to fold the rear seats?	The rear seats can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seats to normal use, raise the seat and push it firmly to engage the seat lock. To remove a seat release the floor locks and slide / lift the seat. Check all seats are securely locked into position before use.
How to change a tyre?	Lift the small recess cover inside the boot to access the spacesaver spare tyre. The tools and jack are stored with the wheel. Undo the retaining screw to lower the wheel to the ground. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use 1 or 2 to select low gears only (this option offers best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).


Fuel Tank Capacity:
83.0 litres / 18.3 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

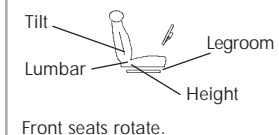

DESIGN AND PRODUCTION BY BETS MULTIMEDIA COMMUNICATIONS T. 0118 996 8526

VCS-REN-05 / 13-10-2003

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide.** If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.

Renault Espace

SUPPLEMENTARY INFORMATION: THE AUTOMATIC PARKING BRAKE



Automatic Operation

The parking brake automatically immobilises the vehicle when the engine is switched off.

Parking brake indicator light 1 lights up for approximately 30 seconds.

The brake will be released automatically as soon as the vehicle starts and accelerates.



Manual Operation

To engage the parking brake

Pull out and release handle 2. Indicator lights 1 and 4 light, the automatic parking brake on message appears on the information display (depending on the vehicle).

To release the parking brake

Pull handle 1 and press unlocking button 3 at the same time and release the controls. Indicator lights 1 and 4 go out, the automatic parking brake off message appears on information display (depending on vehicle).

Temporary Stop

In all cases, the parking brake can be applied manually, for example when stopped at a red light or on a slope.

To do this, pull out and release handle 2. The brake will be released automatically as soon as the vehicle is started up again.

Specific case

If you have to park on a slope when the vehicle is towing a caravan or a trailer, keep handle 2 pulled out for a few seconds to obtain maximum braking.

Automatic Gearbox Versions

Do not leave your vehicle without setting the selector lever to N or P.

For security reasons, the automatic release function is deactivated for other positions, if the driver's door is open or improperly closed.