

 
Volkswagen Beetle

3 Door Hatch / 5 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

	psi (bar)
215/55 R16 Front	29 (2.0)
215/55 R16 Rear	26 (1.8)
215/55 R16 Front (full load)	32 (2.2)
215/55 R16 Rear (full load)	35 (2.4)

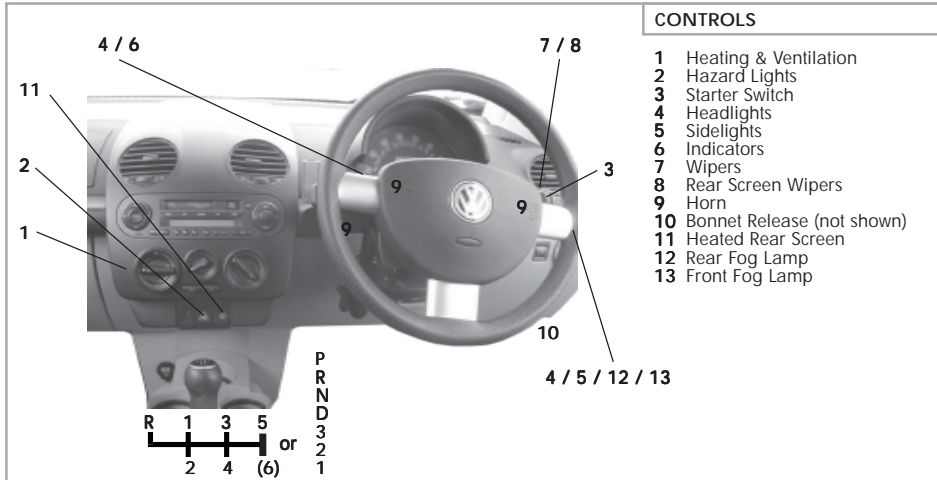

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central locking. Depress the door locking knobs to lock the doors from the inside.
Anti-theft system?	Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
Opening the boot/tailgate?	Centrally locked. Twist the VW badge to reveal handle and key slot. Use the key or remote control to unlock / open. Or press the internal remote release button on the driver's door.
Adjusting the door mirrors?	Electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear.
Operating the sunroof?	If fitted: electric slide type operated by roof mounted switchgear.
Using the child door locks?	Not applicable.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Press the remote release switch on the driver's door. Lift the edge of the flap to open it and twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat back can be folded flat. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use 1 , 2 or 3 to select low gears only (this option offers best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).


Fuel Tank Capacity:
55.0 litres / 12.0 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

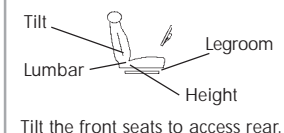

DESIGN AND PRODUCTION BY BETS MULTIMEDIA COMMUNICATIONS T. 0118 964 8526

VCS-VWVG-05 / 13-10-2003

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK** accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.


Volkswagen Bora

4 Door Saloon / 5 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

	psi (bar)
175/80 R14 Front	28 (1.9)
175/80 R14 Rear	28 (1.9)
175/80 R14 Front (full load)	32 (2.2)
175/80 R14 Rear (full load)	43 (3.0)
195/65 R15 Front	28 (1.9)
195/65 R15 Rear	28 (1.9)
195/65 R15 Front (full load)	32 (2.2)
195/65 R15 Rear (full load)	43 (3.0)
205/55 R16 Front	28 (1.9)
205/55 R16 Rear	28 (1.9)
205/55 R16 Front (full load)	30 (2.1)
205/55 R16 Rear (full load)	37 (2.6)

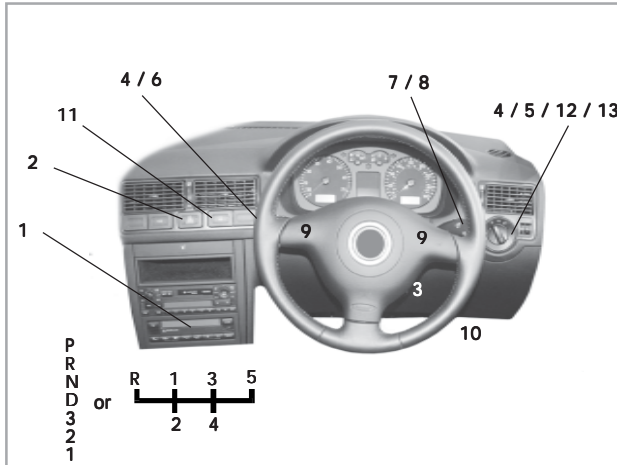

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central locking. Depress the door locking knobs to lock the doors from the inside. Or press the central locking switch on the driver's door armrest.
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
Opening the boot/tailgate?	Centrally locked. Use the key or remote control to unlock / open.
Adjusting the door mirrors?	Internal manual adjustment via levers on the front doors. OR most models have electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric controlled by switches in the driver's door.
Operating the sunroof?	If fitted: electric tilt / slide operated by roof mounted switchgear.
Using the child door locks?	Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or use the switch on the driver's door to activate it.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Press the remote release switch adjacent to the handbrake lever. Lift the edge of the flap to open it and twist off the cap anticlockwise.
Releasing the bonnet?	Pull the bonnet release lever on the right side panel in the driver's foot well. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use 1 , 2 or 3 to select low gears only (this option offers best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).


Fuel Tank Capacity:
55.0 litres / 12.1 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

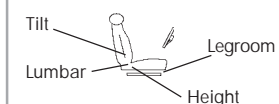

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK** accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.

Volkswagen Golf

3-5 Door Hatch / 5 Door Estate / 5 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

Consult the tyre pressure tables located on the inside of the fuel flap to obtain the tyre pressures for your vehicle.

The vehicle may be fitted with tyres falling within one of these categories... 195/65 R15; 205/55 R16; 225/45 R17).

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

P
R
N
D
3
2
1

or

push the shift lever down when selecting reverse

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central deadlocking. Depress the central locking button on the driver's door to lock the doors from the inside. (To unlock the doors pull the driver's door release lever once).
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
Opening the boot/tailgate?	Centrally locked. Use the key or remote control to unlock / open. Press the top of the VW badge, and lift up the lower edge of the badge to open the tailgate.
Adjusting the door mirrors?	Electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric controlled by switches in the driver's door. There is also a switch used to prevent windows being opened.
Operating the sunroof?	If fitted: electric tilt / slide operated by roof mounted rotary switchgear.
Using the child door locks?	Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine (for diesels, allow the glow plug indicator lamp to extinguish before turning the switch). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Press the remote release switch in the driver's door. Lift the edge of the flap to open it and twist off the cap anticlockwise.
Releasing the bonnet?	Pull the bonnet release lever on the right side panel in the driver's foot well. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use 1 , 2 or 3 to select low gears only (this option offers best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55.0 litres / 12.1 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

3 door: tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide.** If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.


Volkswagen Golf (2003 model)

3-5 Door Hatch / 5 Door Estate / 5 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

	psi (bar)
175/80 R14 Front	28 (1.9)
175/80 R14 Rear	28 (1.9)
175/80 R14 Front (full load)	32 (2.2)
175/80 R14 Rear (full load)	43 (3.0)
195/65 R15 Front	28 (1.9)
195/65 R15 Rear	28 (1.9)
195/65 R15 Front (full load)	32 (2.2)
195/65 R15 Rear (full load)	43 (3.0)
205/55 R16 Front	28 (1.9)
205/55 R16 Rear	28 (1.9)
205/55 R16 Front (full load)	30 (2.1)
205/55 R16 Rear (full load)	37 (2.6)

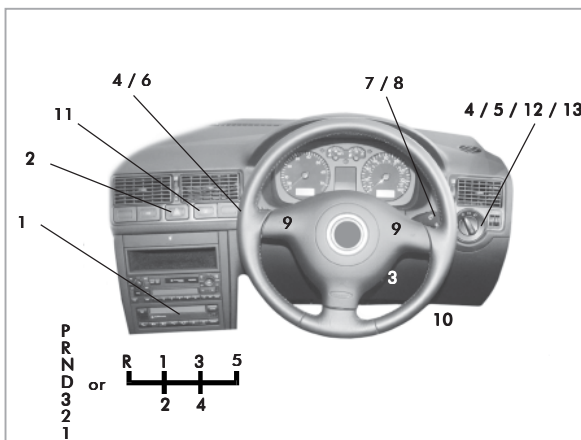

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central locking. Depress the door locking knobs to lock the doors from the inside. Or press the central locking switch on the driver's door armrest.
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
Opening the boot/tailgate?	Centrally locked. Use the key or remote control to unlock / open.
Adjusting the door mirrors?	Internal manual adjustment via levers on the front doors. OR most models have electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric controlled by switches in the driver's door.
Operating the sunroof?	If fitted: electric tilt / slide operated by roof mounted switchgear.
Using the child door locks?	Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or use the switch on the driver's door to activate it.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Press the remote release switch adjacent to the handbrake lever. Lift the edge of the flap to open it and twist off the cap anticlockwise.
Releasing the bonnet?	Pull the bonnet release lever on the right side panel in the driver's foot well. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use 1 , 2 or 3 to select low gears only (this option offers best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55.0 litres / 12.1 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT



3 door: tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide.** If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.


Volkswagen Passat

4 Door Saloon / 5 Door Estate / 5 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

	psi (bar)
195/65 R15 Front	30 (2.1)
195/65 R15 Rear	30 (2.1)
195/65 R15 Front (full load)	33 (2.3)
195/65 R15 Rear (full load)	39 (2.7)
205/60 R15 Front	30 (2.1)
205/60 R15 Rear	30 (2.1)
205/60 R15 Front (full load)	33 (2.3)
205/60 R15 Rear (full load)	39 (2.7)
205/55 R16 Front	30 (2.1)
205/55 R16 Rear	30 (2.1)
205/55 R16 Front (full load)	33 (2.3)
205/55 R16 Rear (full load)	38 (2.6)

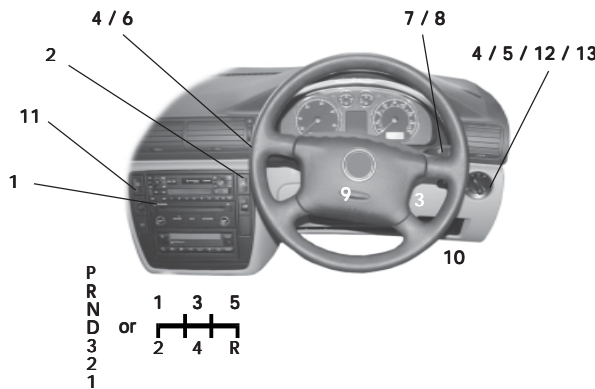

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp Slot

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central locking. Depress the door locking knobs to lock the doors from the inside. Or press central locking switch on driver's door armrest.
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
Opening the boot/tailgate?	Centrally locked. Use the key or remote control to unlock / open. Or release it by pressing the button on the driver's door.
Adjusting the door mirrors?	Electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric operated by switches on the driver's door.
Operating the sunroof?	If fitted. Electric tilt / slide operated by roof mounted switchgear incorporating a pre-select position switch.
Using the child door locks?	Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or activate it by pressing the switch on the driver's door.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Press the remote release switch on the driver's door (except estate). Lift the edge of the flap to open it and twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use 1 , 2 or 3 to select low gears only (this option offers best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).


Fuel Tank Capacity:
62.0 litres / 13.6 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

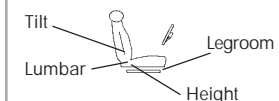

DESIGN AND PRODUCTION BY BETS MULTIMEDIA COMMUNICATIONS T. 0118 996 8526

VCS-VWG-03 / 13-10-2003

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide.** If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.


Volkswagen Polo

3-5 Door Hatch / 5 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

	psi (bar)
165/70 R14 Front	30 (2.1)
165/70 R14 Rear	30 (2.1)
165/70 R14 Front (full load)	32 (2.2)
165/70 R14 Rear (full load)	38 (2.6)
195/50 R15 Front	30 (2.1)
195/50 R15 Rear	30 (2.1)
195/50 R15 Front (full load)	32 (2.2)
195/50 R15 Rear (full load)	38 (2.6)

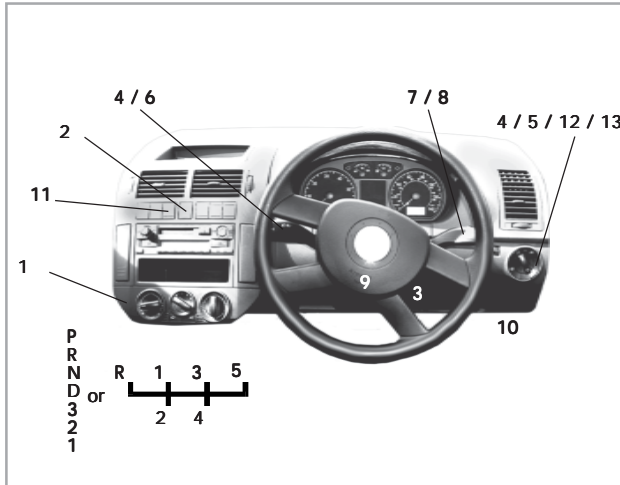

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central locking. Depress the door locking knobs to lock the doors from the inside.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Some models may have an alarm system fitted operated by remote control central locking.
Opening the boot/tailgate?	Centrally locked. Use the key or remote control to unlock / open.
Adjusting the door mirrors?	Electric internal adjustment operated via a control knob on the driver's door. Or manual internal adjustment via control levers on each front door.
Opening the windows?	Electric front operated via control buttons on the driver's door with manually operated rear. Or all manually operated.
Operating the sunroof?	If fitted: electric tilt / slide. To open: press the roof mounted switch backward. To close: press the switch forward. To tilt: first open it, then press the switch backwards.
Using the child door locks?	Twist the key slot located on the edge of the rear door (near the door lock mechanism) to activate it. Check from inside that the doors are secure.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Located under flap on rear offside. Lift the edge of the flap to open it. Use the key to unlock the cap and twist it off anticlockwise.
Releasing the bonnet?	Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	Not applicable.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).


Fuel Tank Capacity:
45.0 litres / 10.0 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

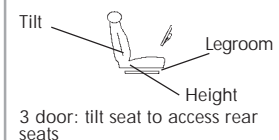

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK** accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.


Volkswagen Sharan

People Carrier / 7 Seats

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

	psi (bar)
195/65 R15 Front	38 (2.6)
195/65 R15 Rear	35 (2.4)
195/65 R15 Front (full load)	39 (2.7)
195/65 R15 Rear (full load)	44 (3.0)
205/60 R15 Front	34 (2.3)
205/60 R15 Rear	30 (2.1)
205/60 R15 Front (full load)	36 (2.5)
205/60 R15 Rear (full load)	39 (2.7)
215/55 R16 Front	34 (2.3)
215/55 R16 Rear	30 (2.1)
215/55 R16 Front (full load)	36 (2.5)
215/55 R16 Rear (full load)	39 (2.7)

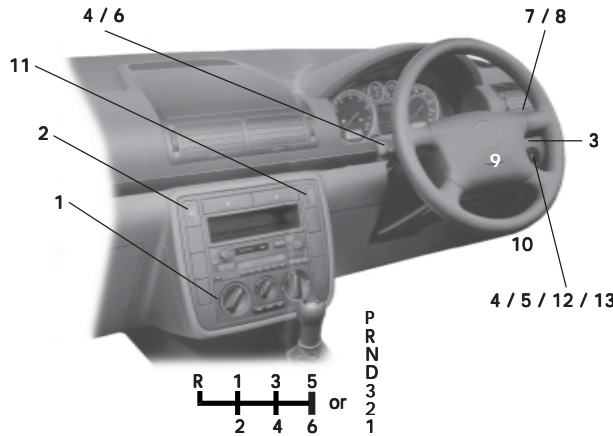

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

BRIEF OPERATIONAL ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central locking. Depress the door locking knobs to lock the doors from the inside. Or press central locking switch on the driver's door armrest.
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
Opening the boot/tailgate?	Most models are centrally locked. Use the key or remote control to unlock / open.
Adjusting the door mirrors?	Manual internal adjustment operated via control levers on the front doors. Or electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric.
Operating the sunroof?	Not fitted.
Using the child door locks?	Located on the edge of the rear doors, slide the lever up to activate it. Check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
How to open fuel filler cap?	Centrally locked. Located under flap on rear offside. Press remote release switch on centre console. Lift the edge of the flap to open it and twist off the cap anticlockwise.
Releasing the bonnet?	Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
How to fold the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat. To remove seats, unlock floor catch and slide/lift out. When replacing seats ensure they are securely located before using them.
How to change a tyre?	Lift the small recess cover inside the boot to access the retaining bolt securing the standard steel spare tyre. The tools and jack are stored with the wheel. Undo the retaining bolt to lower the wheel to the ground. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use 1 , 2 or 3 to select low gears only (this option offers best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).


Fuel Tank Capacity:
70.0 litres / 15.4 gallons

SAFETY FEATURES

In case of a breakdown: Use hazard lights. Attempt to park in a safe position. Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

When using child seats: never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Ensure the fitting instructions are followed, check its position and security before use.

DRIVER'S SEAT

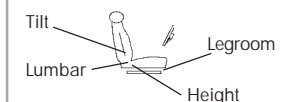

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **Europcar UK** accepts no responsibility for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of Europcar staff for assistance.

Please DO NOT remove this instruction card from the vehicle.

Europcar

YOU RENT A LOT MORE THAN A CAR.